

▲ WARNING

- The fork cap is under spring pressure. Use care when removing it and wear face protection.

NOTE

- Temporarily install the fork spring, spacer, and fork cap if the socket bolt turns with the fork piston, during socket bolt removal.
- Always replace oil seal with new one.

Requisite Service

- Fork removal (page 10-8)

Procedure	Qty	Remarks
Disassembly Order		
(1) Fork cap	1	
(2) O-ring	1	
(3) Spacer	1	
(4) Spring seat	1	
(5) Fork spring	1	After removing, pour out any remaining fork oil.
(6) Dust seal	1	When removing, do not damage the fork tube.
(7) Stopper ring	1	
(8) Fork socket bolt	1	
(9) Sealing washer	1	
(10) Fork piston	1	
(11) Fork piston ring	1	Do not remove it unless replacement is necessary.
(12) Rebound spring	1	
(13) Fork tube	1	
(14) Oil seal	1	
(15) Back up ring	1	
(16) Slider bushing	1	
(17) Fork tube bushing	1	Do not remove it unless replacement is necessary.
(18) Oil lock piece	1	
(19) Fork slider	1	